

**CONTENTS OF YOUR  
XTREME VERSION 10 PACKAGE**



**OPTIONAL ITEMS**



I.	Contents of Your <i>Xtreme</i> Version 10 Package.....	2
II.	Taking Care of Your <i>Xtreme</i> V10.....	4
III.	Setting Up <i>Xtreme</i> V10 with Your Video/Audio System.....	5
IV.	Bible Key Function Guide.....	8
V.	Summary of Bible Key Functions...	10
VI.	Using the New International Version (NIV) Bible in Your <i>Xtreme</i> V10 Unit.....	11
VII.	Guide to the Books of the Bible	
	• Sequential List / Number of Chapters.....	15
	i. Books of the Old Testament..	15
	ii. Books of the New Testament.	17
	• Alphabetical List.....	19
	i. Books of the Old Testament..	19
	ii. Books of the New Testament.	20
VIII.	Using Your <i>Xtreme</i> V10 as a Praise Videoke Microphone.....	21
IX.	Videoke Key Function Guide.....	22
X.	Summary of Videoke Key Functions.....	28
XI.	Configuration.....	30
XII.	Profile Configuration.....	32
XIII.	Advanced Configuration.....	34
XIV.	Songchip.....	35
XV.	Songlist Binder.....	35
XVI.	Wireless Sub-mic.....	36
XVII.	Troubleshooting Guide.....	37
XVIII.	Specifications.....	38
XIX.	Technical Service Centers.....	39

**POWER SUPPLY PRECAUTIONS:**

1. Always make sure to remove batteries before connecting your V10 to its power adaptor. If two sources of power are used simultaneously, the batteries might leak and damage the microphone. This will void the warranty.
2. Turn off your V10 before unplugging the power adaptor.
3. Always remove batteries when not using the V10 microphone.
4. Use only the Adaptor supplied in your V10 package. If this is lost or damaged, replace only with an Adaptor supplied by The Astra Group, Inc. or by authorized Xtreme Magic Sing dealers. The plug of other adaptors may fit, but the electrical specifications may be different and therefore may damage the precise electronics of your V10.0 unit.
4. Always turn off the V10 before removing or adding song chips.

**CLEANING AND HANDLING:**

5. When cleaning, use a soft cloth. Never use alcohol or chemical solutions.
6. Do not drop your V10 or subject it to heavy impact.
7. Do not apply pressure on the LCD.
8. Do not use sharp objects (e.g., long fingernails, ball pens) to press on the keypad.
9. Do not disassemble the microphone. *This will void the warranty.*

 
 
**STORAGE:**

10. Avoid storing in direct sunlight, in places with high temperature, or in moist areas.
11. When transporting your V10 in a vehicle, keep it with you in the air conditioned interior. If your unit was transported in the heated trunk of a vehicle, or was left in a car under the sun for some time, allow the microphone to cool off before using. This will prevent it from overheating while in operation.




## SETTING UP XTREME VERSION 10 WITH YOUR VIDEO/AUDIO SYSTEM

1. Install your V10 and its attachments as shown in the following diagrams.

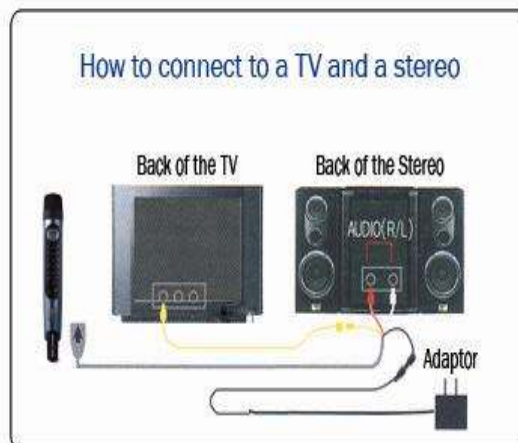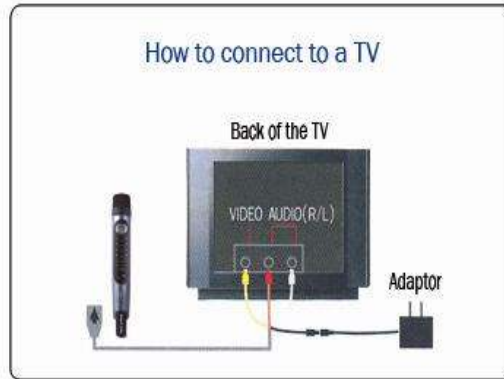


### How to connect to an external device

 
*Connecting to an external device (DVD, Camcorder, VCD, etc.) allows the user to transmit pictures from the device to the TV screen.*

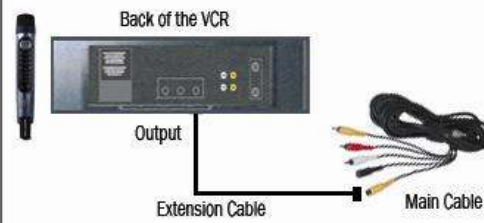

Connect the yellow female jack (external video jack) of the main cable to the male extension cable.

### How to connect to an LCD projector and a stereo

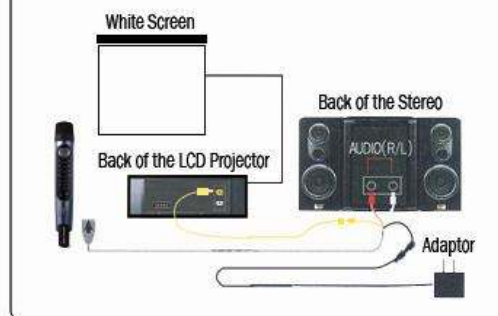 

 
2. Switch on the TV and system. Put the TV in video mode.
3. Turn on your V10 by pressing .









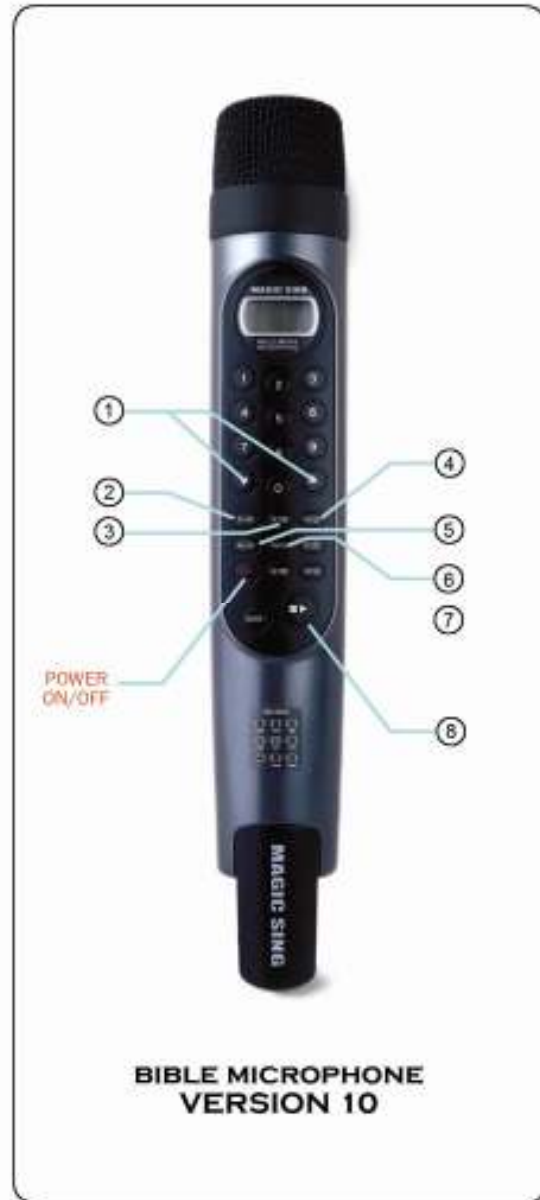














**Caution:** Use only the adaptor supplied with your Version 10 package, or a Magic Sing adaptor supplied by The Astra Group, Inc. or an authorized Xtreme Magic Sing dealer. Using other adaptors can damage your mic even if they have a compatible plug.

**Congratulations!**

As owner of the  
Xtreme Version 10,  
you now have a highly useful,  
versatile aid  
for Bible reading, study and  
contemplation,  
as well as for singing in praise  
and worship of the Lord.





1.  /  • To go to the next or previous Verse.
2.  • This button is used to go to the Bible mode from the default screen or from Videoke mode. Simply press  and .
3.  • This is used to go to a specific Chapter after selecting a Book of the Bible. Just key in the Chapter number and press .
4.  • This is used to go to a specific Verse after selecting a Book and a Chapter of the Bible. Just key in the Verse number and press .
5.  • Press this button to go to the previous Bible page. It is also used to exit from Bible mode, simply press  repeatedly until the videoke screen appears.
6.  • Press this button to go to the next Bible page. It is also used to select a specific option. For example, when choosing a Verse, you can scroll through the list using  / , then select by pressing .
7.  • This is used to automatically have the TV screen shift from one Bible page to the next. Press  once and use  /  to set the speed level of the slideshow. To turn on or off the slideshow function, simply press  twice, then select “Auto Off.”
8.  • This button is used if you want to have background music while reading the Bible. Just enter the song number then press  to play the music. Press  again to stop.






**BIBLE MODE**

To remove all background pictures	(MODE) + (6)
To go to Bible Mode, press (MODE) + (RES/B). Choose big or small font and manual or continuous advance of text. The Book Select screen then appears. Highlight the Book you want to read, then press (FAST) to select	(MODE) + (RES/B)
To choose a specific Chapter of the selected Book, key in the Chapter number and press (REF/C)	(REF/C)
To choose a specific Verse of the selected Chapter and Book, key in the Verse number and press (VERS/V)	(VERS/V)
To go to the next or previous verse	(▲) / (▼)
To go to the next Bible page	(FAST) (▶)
To go to the previous Bible page	(◀) (SLOW)
To set the Bible page slideshow speed; Auto On / Off; Auto Off	(SPEED) (A)
To play background music while reading the Bible, key in a song number and press (▶/■) to play. To stop the music, press (▶/■) again.	(▶/■)
To exit Bible mode, press (◀) (SLOW) repeatedly until the opening screen appears.	(◀) (SLOW)



 USING THE NEW INTERNATIONAL  
VERSION (NIV) BIBLE IN YOUR  
XTREME VERSION 10.0 UNIT

1. When you turn on your V10, the default screen appears as follows.



2. To read the Bible text without any background pictures, press **(MODE)** and **(6)**. Then, press **(MODE)** and **(RESET)**.

3. This menu will appear which allows you to choose small or large letters.



- This is how your TV screen will appear if you choose small letters.




- If you choose large letters:



4. Discrete reading of passages.

- To read discrete parts of the Bible:
  - Press ① for small letters.
  - Press ③ for large letters.

*(After reading the selected passages, pressing  will take you back to the Verse, Chapter, and Book Select screens so you may choose the next part of the Bible you want to read.)*

5. Continuous reading of passages.

- To read a selected part of the Bible continuously:
  - Press ② for small letters.



→ Press ④ for large letters.

6. To select Book, Chapter, and Verse.

 
- On the Book Select screen, scroll using ▲ / ▼ to the desired Book, and press (FAST▶).
- The Chapter Select screen appears. Press your desired Chapter number then (REF) (or scroll using ▲ / ▼ to the desired Chapter number, and press (FAST▶)).
- The Verse Select screen appears. Press your desired Verse number then (VERSLV) (or scroll using ▲ / ▼ to the desired Verse number, and press (FAST▶)).
- To go back to the previous screen (Chapter, Book), press (◀SLOW).

7. Press (FAST▶) to go to the next page.


Press (◀SLOW) to go back to the previous one.

8. Selecting reading speed.

- The microphone advances the text automatically.
- Press (SPEED) once and use ▲ / ▼ to set the amount of time per page before the TV screen shifts from one page to the next. The screen changes faster with a lower number; it changes more slowly with a higher number.

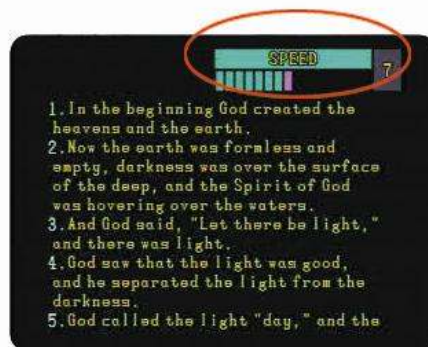

 - To freeze the page, turn off the slideshow function. Simply press **(SPEED)** twice, then select “Auto Off.”

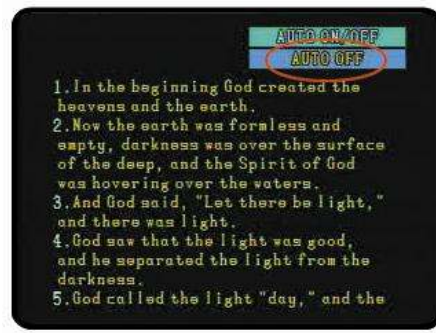

#### 9. Background Music.

- This function allows you to listen to a background music while reading the Bible. Press the song number and **(M)** to start the music. Press **(M)** again to stop. The background music plays continuously and sequentially as in the order of the song list.

#### 10. Background Images

- For special needs, if you choose to have picture background display while reading the Bible, exit Bible mode first by pressing **(SLOW)** repeatedly until the default screen appears. Press **(MODE)** and **(6)** to set the Picture Background on. Finally, press **(MODE)** and **(RES)** to go back to Bible mode.

- 11.. If you wish to exit the Bible mode, simply press **(SLOW)** repeatedly until the opening screen appears. You can now use your V10 as a videoke microphone.





THE BOOKS OF THE OLD TESTAMENT

Book Sequence	TITLE OF BOOK	Number of Chapters
1 <sup>ST</sup>	GENESIS	50
2 <sup>ND</sup>	EXODUS	40
3 <sup>RD</sup>	LEVITICUS	27
4 <sup>TH</sup>	NUMBERS	36
5 <sup>TH</sup>	DEUTERONOMY	34
6 <sup>TH</sup>	JOSHUA	24
7 <sup>TH</sup>	JUDGES	21
8 <sup>TH</sup>	RUTH	4
9 <sup>TH</sup>	1 SAMUEL	31
10 <sup>TH</sup>	2 SAMUEL	24
11 <sup>TH</sup>	1 KINGS	22
12 <sup>TH</sup>	2 KINGS	25
13 <sup>TH</sup>	1 CHRONICLES	29
14 <sup>TH</sup>	2 CHRONICLES	36
15 <sup>TH</sup>	EZRA	10
16 <sup>TH</sup>	NEHEMIAH	13
17 <sup>TH</sup>	ESTHER	10
18 <sup>TH</sup>	JOB	42
19 <sup>TH</sup>	PSALMS	<b>Bk I:</b> 1-41; <b>Bk II:</b> 42-72; <b>Bk III:</b> 73-89; <b>Bk IV:</b> 90-106; <b>Bk V:</b> 107-150





**THE BOOKS OF THE  
OLD TESTAMENT**

Book Sequence	TITLE OF BOOK	Number of Chapters
20 <sup>th</sup>	PROVERBS	31
21 <sup>st</sup>	ECCLESIASTES	12
22 <sup>nd</sup>	SONG OF SONGS	8
23 <sup>rd</sup>	ISIAH	66
24 <sup>th</sup>	JEREMIAH	51
25 <sup>th</sup>	LAMENTATIONS	5
26 <sup>th</sup>	EZEKIEL	48
27 <sup>th</sup>	DANIEL	12
28 <sup>th</sup>	HOSEA	14
29 <sup>th</sup>	JOEL	3
30 <sup>th</sup>	AMOS	9
31 <sup>st</sup>	OBADIAH	(n.a.)
32 <sup>nd</sup>	JONAH	4
33 <sup>rd</sup>	MICAH	7
34 <sup>th</sup>	NAHUM	3
35 <sup>th</sup>	HABAKKUK	3
36 <sup>th</sup>	ZEPHANIAH	2
37 <sup>th</sup>	HAGGAI	2
38 <sup>th</sup>	ZECHARIAH	14
39 <sup>th</sup>	MALACHI	4





**THE BOOKS OF THE  
NEW TESTAMENT**

Book Sequence (In Bible/In N. Testament)	TITLE OF BOOK	Number of Chapters
40 <sup>th</sup> /1 <sup>st</sup>	MATTHEW	28
41 <sup>st</sup> /2 <sup>nd</sup>	MARK	16
42 <sup>nd</sup> /3 <sup>rd</sup>	LUKE	24
43 <sup>rd</sup> /4 <sup>th</sup>	JOHN	21
44 <sup>th</sup> /5 <sup>th</sup>	ACTS	27
45 <sup>th</sup> /6 <sup>th</sup>	ROMANS	16
46 <sup>th</sup> /7 <sup>th</sup>	1 CORINTHIANS	13
47 <sup>th</sup> /8 <sup>th</sup>	2 CORINTHIANS	6
48 <sup>th</sup> /9 <sup>th</sup>	GALATIANS	6
49 <sup>th</sup> /10 <sup>th</sup>	EPHESIANS	6
50 <sup>th</sup> /11 <sup>th</sup>	PHILIPPIANS	4
51 <sup>st</sup> /12 <sup>th</sup>	COLOSSIANS	4
52 <sup>nd</sup> /13 <sup>th</sup>	1 THESSALONIANS	4
53 <sup>rd</sup> /14 <sup>th</sup>	2 THESSALONIANS	3



**THE BOOKS OF THE  
NEW TESTAMENT**

Book Sequence (In Bible/In N. Testament)	TITLE OF BOOK	Number of Chapters
54 <sup>th</sup> /15 <sup>th</sup>	1 TIMOTHY	6
55 <sup>th</sup> /16 <sup>th</sup>	2 TIMOTHY	4
56 <sup>th</sup> /17 <sup>th</sup>	TITUS	3
57 <sup>th</sup> /18 <sup>th</sup>	PHILEMON	(n.a.)
58 <sup>th</sup> /19 <sup>th</sup>	HEBREWS	13
59 <sup>th</sup> /20 <sup>th</sup>	JAMES	5
60 <sup>th</sup> /21 <sup>st</sup>	1 PETER	5
61 <sup>st</sup> /22 <sup>nd</sup>	2 PETER	3
62 <sup>nd</sup> /23 <sup>rd</sup>	1 JOHN	5
63 <sup>rd</sup> /24 <sup>th</sup>	2 JOHN	(n.a.)
64 <sup>th</sup> /25 <sup>th</sup>	3 JOHN	(n.a.)
65 <sup>th</sup> /26 <sup>th</sup>	JUDE	(n.a.)
66 <sup>th</sup> /27 <sup>th</sup>	REVELATION	22



LISTED IN  
ALPHABETICAL ORDER

BOOKS OF THE OLD TESTAMENT	
AMOS	JUDGES
1 CHRONICLES	1 KINGS
2 CHRONICLES	2 KINGS
DANIEL	LAMENTATIONS
DEUTERONOMY	LEVITICUS
ECCLESIASTES	MALACHI
ESTHER	MICAH
EXODUS	NAHUM
EZEKIEL	NEHEMIAH
EZRA	NUMBERS
GENESIS	OBADIAH
HABAKKUK	PROVERBS
HAGGAI	PSALMS
HOSEA	RUTH
ISIAH	1 SAMUEL
JEREMIAH	2 SAMUEL
JOB	SONG OF SONGS
JOEL	ZECHARIAH
JONAH	ZEPHANIAH
JOSHUA	





 
## USING YOUR XTREME VERSION 10 AS A PRAISE VIDEOKE MICROPHONE

1. To go from Bible Mode to Videoke Mode, press **◀SLOW** repeatedly until the opening screen appears.
2. Turn on Picture Background Display by pressing **MODE** and **6**. Omit this step if you want a clear screen.
3. Key in each digit of the song number, or press **▲** / **▼** to scroll through the songs.




3. Press **▶/▶** to begin.



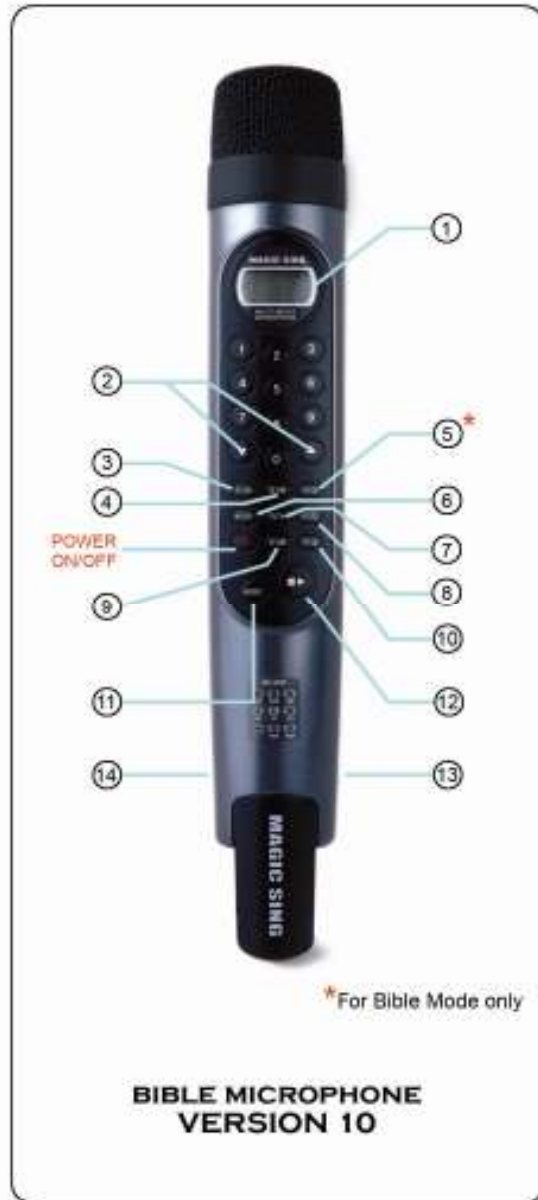



1. **LCD DISPLAY** • Shows the action in progress.

2. **ARROW UP / DOWN** • Press   to go through menus and options.


3. **RES** • This is used to reserve songs. Just select a song and key in the number, then press . Do the same to pre-select more songs. (*Note: You can reserve up to 20, but the TV screen displays only 10 songs.*)


• To cancel a song from the reserved list, simply select the song title then press  to delete.



4. **REF** • (*For Hymn songs only.*) Press  to repeat the refrain part when you are playing a song. The button does not work if there is no refrain in the song.

5. **VERSE\*** • Only functions in Bible mode. (Refer to page 9, *Bible Key Function Guide.*)

6. **SLOW** • Press and hold down  to pause. The song continues playing after the button is released.

7. **FAST** • Press and hold down  to make the song play faster. The song returns to normal speed after the button is released.

8. **SPEED** • Press **SPEED** followed by **▲** / **▼** to adjust the song's tempo. The setting stays until reset or the mic is turned off. The next time the mic is turned on, the speed goes back to the default setting.



### 9. **KEY**

- Press **KEY** *once* to set the pitch of the song.
- Press **KEY** *two times* followed by **▲** / **▼** to set the music volume.
- Press **KEY** *three times* followed by **▲** / **▼** to set the volume of the main microphone.
- Press **KEY** *four times* followed by **▲** / **▼** to set the echo level.
- Press **KEY** *five times* followed by **▲** / **▼** to set the melody volume.
- Press **KEY** *six times* followed by **▲** / **▼** to set the volume of the sub microphone.

10. **PART** • (For *Hymn* songs only.) Press **PART** to choose the instruments and parts to play in a song.

Default = Rhythm (all instruments play)

Press 1x = Drum Off

2x = Piano

3x = Organ

4x = Piano + Organ

5x = Soprano Key

6x = Alto Key

7x = Tenor Key

8x = Bass key

9x = Soprano + Alto keys

 


- 10x = Soprano + Tenor Keys
- 11x = Tenor + Bass Keys
- 12x = Piano2
- 13x = Back to Default

11. **MODE** • Press **MODE** and use other buttons to use other videoke functions:

**MODE** + **0**: **Musical Instrument Change**

To choose the musical instrument playing the song's guide melody, press **MODE** and **0**, then scroll using **▲** / **▼**.

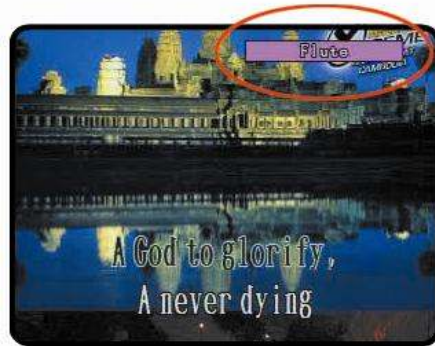

**MODE** + **1**: **Continuous Play**

Choose a song and press **MODE** and **1** to play the songs in continuous sequence.

**MODE** + **2**: **Repeat (For Hymn songs only.)**

To play a particular song repeatedly, press **MODE** and **2** during playback.

**MODE** + **3**: **Skip Interlude (For Hymn songs only.)**

This function enables you to skip the interlude part while you are singing a gospel song. Press **MODE** and **3** to turn it on or off.

**MODE** + **4**: **Song Reservation Options**

Use this function to save the list of reserved songs even after turning off your V10. After

 
pressing **MODE** and **4**, you can choose among the options: Load, Save, Delete or Exit.

**MODE** + **5**: *Realtime Score Display*

Realtime scoring allows you to see the score while the person is singing. To turn it on or off, press **MODE** and **5**. (*Note: Display Score under the Profile Configuration Menu should be turned on for Realtime Score Display to work.*)

**MODE** + **6**: *Background*

When in Videoke Mode, you can choose between a picture background and a blank screen by pressing **MODE** and **6**.

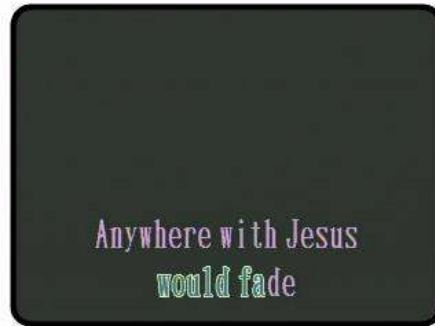

**MODE** + **7**: *Random Selection*

For a random playback of songs, press **MODE** and **7** while on stand by. (If you press these buttons during song playback, the feature will not work.)

 
**MODE** + **8**: *Sub-Mic*

To switch the sub-mic on or off, press **MODE** and **8**.

**MODE** + **9**: *FM Frequency*

Press **MODE** and **9** either to switch the frequency off or to set it to 106.3, 106.7, 107.1, or 107.5 MHz. Set your FM tuner to the frequency the

microphone is set to hear the sound from the FM tuner.

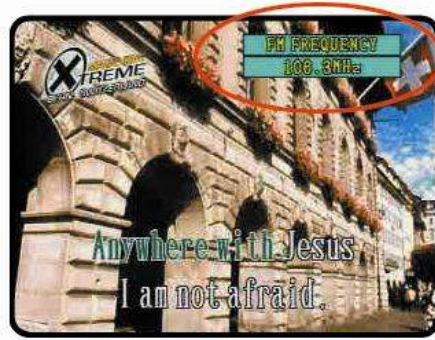

12. **PLAY / STOP** • Press  to start or stop song playback.

13. **USB PORT** • For future system upgrades.

14. **NECKPHONE JACK** • Connect the neck phone contained in your V10 package and listen to your own voice and the music while singing.





**VIDEOKE MODE**

<b>Common Videoke Functions</b>	
To reserve a song, key in the song number and press <b>(RES)</b> . To cancel reservation, select the song title and press <b>(RES)</b> .	<b>(RES)</b>
To pause, press and hold down <b>(SLOW)</b> .	<b>(SLOW)</b>
To play the song faster, press and hold down <b>(FAST)</b> .	<b>(FAST)</b>
To adjust the song's playback speed.	<b>(SPEED)</b>
To adjust the Key/Pitch; Music Volume; Main Mic Volume; Echo Level; Melody Volume; Sub-mic Volume	<b>(KEY)</b>
To start or stop song playback	<b>(▶/■)</b>
Musical Instrument Change	<b>(MODE) + (0)</b>
Continuous Play	<b>(MODE) + (1)</b>
Reservation Song Control	<b>(MODE) + (4)</b>
Realtime Score Display	<b>(MODE) + (5)</b>
Picture Background (On / Off)	<b>(MODE) + (6)</b>
Random Song Selection	<b>(MODE) + (7)</b>
Sub Mic (On / Off)	<b>(MODE) + (8)</b>
FM Frequency (Off / 106.3 / 106.7 / 107.1 / 107.5MHz)	<b>(MODE) + (9)</b>
Profile Configuration Menu (Controls personal display and audio features)	<b>(MODE) + (MODE) + (MODE) + (3)</b>
Advanced Configuration Menu (Lyric Start Help, Lyric Line, Lyric Format, Message Language)	<b>(MODE) + (MODE) + (MODE) + (4)</b>



 


**VIDEOKE MODE**

<b>Special Videoke Functions for HYMN SONGS</b>	
To repeat the refrain of the song.	(REF) ①
Prelude (On / Off)	(MODE) + (PART) ②
Rhythm; Rhythm (Drum Off); Piano; Organ; Piano+Organ; Soprano; Alto; Tenor; Bass; Soprano+Alto; Soprano+Tenor; Tenor+Bass; Piano2 Repeat	(MODE) + ②
Skip Interlude	(MODE) + ③



Press **(MODE)** three times to enter the configuration menu. To select the options under each function, you can either use **(▲)** / **(▼)** to scroll up or down then press **(▶)** to select, or simply press the corresponding number on the left.

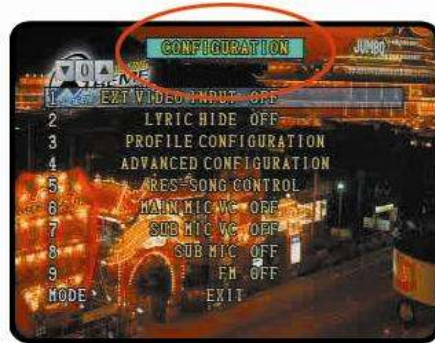

① **EXTERNAL VIDEO INPUT (ON / OFF)** • This function enables you to use a different background video other than the built-in picture backgrounds. Using a camcorder, you can even watch yourself sing! Or use a VCD player to watch your family outing video while you are singing! Simply connect your mic to another device (DVD, camcorder, digital camera, etc.) where you want the video to come from. (See the section “Setting Up Your Version 10.0: How to Connect to an External Device” on page 6.)

② **LYRIC HIDE (ON / OFF)** • Use this function if you choose not to see the lyrics during song playback.

③ **PROFILE CONFIGURATION** • Use this to go to other options and settings of your V10.

④ **ADVANCED CONFIGURATION** • Use this to go to other options and settings of your V10.

⑤ **RES-SONG CONTROL** • This function allows you to save and recover the list of songs that you reserved even after turning off your V10. Press **MODE** and ④ as a shortcut.

⑥ **MAIN MIC VC** • Use this to change the voice of the user on the main mic. Select among *Male*, *Female*, or *Off*.

⑦ **SUB MIC VC** • Use this to change the voice of the user on the sub mic. Select among *Male*, *Female*, or *Off*.

⑧ **SUB MIC (ON / OFF)** • Like pressing **MODE** and ⑧, this option turns the sub mic on or off.

⑨ **FM** • The FM option is used to transmit music from the mic to an FM station. Press **MODE** and ⑨ as a shortcut.

**MODE** • Exit.



To go the Profile Configuration menu, press **(MODE)** three times, then press **(3)**. To choose an option, you can either use **(▲)** / **(▼)** to scroll up or down then press **(▶/■)** to select, or simply press the corresponding number on the left.

① **PART SETTING** • (For *Hymn* songs only.) This allows you to choose between playing all the instruments in a song (Rhythm) or a particular musical part only (*Piano / Organ / Piano + Organ*). In some cases, you can also choose the key (*Soprano / Alto / Tenor / Bass / Soprano + Alto / Soprano + Tenor / Tenor + Bass*).



② **KEYTONE (ON / OFF)** • Use this to turn on or off the sound heard when a button is pressed.

③ **AUTO OFF (ON / OFF)** • Use this to turn on or off the automatic shutdown function of your ED10000.

④ **LOGO SONG (ON / OFF)** • Use this to turn on or off the music heard when turning on your microphone.

⑤ **LOGO (ON / OFF)** • Use this to allow or keep the logo from showing. The logo appears right after you turn the mic on, and it disappears if you turn the logo off.

⑥ **BACKGROUND (ON / OFF)** • When in Videoke mode, you can choose between seeing the background pictures while singing or just a blank screen.

⑦ **TEMPO & KEY RESET (ON / OFF)** • Resets the tempo and key at the start of every song.

⑧ **DISPLAY SCORE (ON / OFF)** • Allows you to activate or deactivate the score from displaying after each song. Display Score should be turned on in order for Realtime Score Display to function.

⑨ **KARAOKE MODE (NORMAL / WORSHIP)** • Your ED10000 has two default profile configuration settings: Normal and Worship. This option allows you to select and set between the two. *(Note: Some functions are dependent on this setting such as the Refrain, Verse and Realtime Scoring.)*

Ⓜ **EXIT**





## ADVANCED CONFIGURATION

To go to the Advanced Profile Configuration menu, press **MODE** three times, then press **4**. To select, you can either use **▲** / **▼** to scroll up or down the options, then press **▶/■**, or simply press the corresponding number on the left.

① **LYRIC START HELP (ON / OFF)** • Use this to enable or disable the guide countdown before you start singing the lyrics.

② **LYRIC LINE (2 LINE / 3 LINE)** • Use this to set the number of lines you want to appear on your TV screen.

③ **LYRIC FORMAT (LEFT-RIGHT / CENTER)** • Use this to set the arrangement of lyric lines on your TV screen.

 
**MODE** **EXIT**







1. Turn off your Version 10 microphone.
2. Open the back cover.
3. Insert the chip or recording pack firmly with the arrow pointing towards the head of the microphone.
4. Close the back cover and turn the power on.

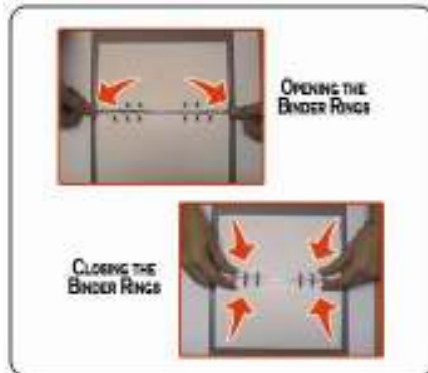

1. Open the binder rings by pressing the metal tabs at the top and bottom of the binder.
2. Put in the new song list between the rings.
3. Close the binder rings.



1. The main mic should be turned off.
2. Take out the back cover of the main mic and put in the sub-mic receiver.
3. Turn on the main mic by pressing .
4. If you press  and , the TV screen will display "SUB-MIC ON."
5. Open the back cover of the Sub-mic, insert two AA batteries as indicated and press  to turn it on. A green LED light will blink as a sign that the sub-mic is already on.  
*(Note: The batteries need to be replaced when a red LED light appears instead of a green one.)*



These buttons on the sub-microphone function similarly like those on the main microphone:

1. Mode 
2. Play/Stop 
3. Arrow Up / Down  / 
4. Reservation 

**1. If your Version 10 doesn't power up**

- When you are using the power adaptor
  - Make sure that the adaptor is correctly plugged into the power outlet.
  - See to it that the male plug is appropriately inserted into the female plug.
- When you are using batteries
  - Make sure that two new AA batteries are in the compartment.
  - Check if the batteries are inserted in the correct direction.
  - Check the elasticity of the stainless steel in the battery compartment.
  - Make sure that the batteries are in good condition.

**2. If the user's voice is not heard on the microphone**

- Press the microphone button and check the volume.
- Check the condition of the batteries.




**3. If the TV does not show pictures or output sound**


- Make sure you have made the correct connections according to the correct colors.
- Check TV volume. If set too low, increase.
- Check if the TV is on video mode.
- Check the condition of the batteries.

**4. When the picture on the TV screen stays still and the mic won't turn off**

- Press  for 3 seconds or longer until the V10 turns off.

**5. When the video does not show properly**


- Set the video to the correct mode.
  - To convert from NTSC to PAL: press and hold down . While doing this this, press  and release. Continue pressing  until you see the word PAL on the TV screen.

→ To convert from PAL to NTSC: press and hold down ⑨. While doing this, press  and release. Continue pressing ⑨ until you see the word NTSC on the TV screen.

**6. When the external video input does not function**

- Check if the External Video Pack is correctly positioned in its slot.
- Make sure that the RCA cable is properly connected.

**When uncertain about the unit's performance, try resetting it as follows:**

- Press and hold down ①. While doing this, press  and release. Continue pressing ① until you see the phrase USER RESET on the TV screen.

## SPECIFICATIONS

- **Voice Frequency Range :** 200-1500 Hz
- **Battery :** 1.5V x 2 Alkaline
- **Life of Battery :** 1 hours 30min
- **FM Frequency Transmission :** 106.3 MHz,  
106.7 MHz,  
107.1 MHz,  
107.5 MHz
- **TV Channel :** Video Channel
- **Wattage :** 500 mA
- **Overflow (Under 10V) :** Built-in Protection  
Circuit for Reverse Voltage
- **Dimension :** 48 x 45 x 280
- **Weight :** 210g
- **Supply Voltage :** 8V DC
- **Resolution :** 720 x 480 (Interlaced)
- **Image Color :** True Color
- **Operating Temperature :** -20°C to 65°C  
(-4°F to 149°F)





*For your repair services, please contact one of the following technical centers.*

**PHILIPPINES**

- **ENTER INTERNATIONAL PHILIPPINES INC.**  
**Peter Kim**  
Marketing Manager  
Unit 1, Ground Floor, Building 2, Jannov Plaza  
2295 Pasong Tamo Ext., Makati City  
TEL: +63-2-848-5415/+63-2-891-0584  
FAX: +63-2-891-0583  
E-mail: [eip@globelines.com.ph](mailto:eip@globelines.com.ph)

**USA**

- **ENTER TECH ES2 TECH CORP**  
2642 GATES AVE. IRVINE CA 92606  
TEL: +1-949-261-6500  
FAX: +1-949-851-9900  
E-mail: [chris@enter-tech.com](mailto:chris@enter-tech.com)
- **JOEUN ENTERPRISE**  
3361 West 1<sup>st</sup>. Street Suite 202 Los Angeles, CA 90004  
TEL: +1-866-855-6386  
E-mail: [customerservice@joeunenterprises.com](mailto:customerservice@joeunenterprises.com)
- **KOCONIX.COM**  
koConix.com  
2642 Gates Ave. Irvine, CA 92614  
TEL: +1-949-553-9416  
Toll Free: +1-866-827-6632  
E-mail: [sales@koconix.com](mailto:sales@koconix.com)



## EUROPE

- **ENTER TECH, GERMANY OFFICE**  
**Friday Kim**  
Marketing Manager  
European Marketing Division  
Korea Business Development Center (SBC)  
Industriestrasse 34, D-65760 Eschborn, Germany  
TEL: +49-6196-776822  
FAX: +49-6196-779822  
E-mail: [friday@enter-tech.com](mailto:friday@enter-tech.com)

## INDIA

- **ENTER TECH, INDIA OFFICE**  
**Charlie Shin**  
Marketing Manager  
Flat No. 208 on 2<sup>nd</sup> floor in “C” wing of the  
Building, Panchtantra 2, Yari Road, Versova,  
Andheri (West), Mumbai 400 061, India  
TEL: +91-22-5572-1976  
+91-22-5572-1977  
Mr. Ivor Fernandes +91-9892-305-991  
Mr. Charlie Shin +91-9870-350-315  
E-mail: [shinfrog@dreamwiz.com](mailto:shinfrog@dreamwiz.com)  
[Charlie@enter-tech.com](mailto:Charlie@enter-tech.com)

## SOUTH AMERICA

- **NEKA**  
MANZANA 38, LOTES 5Y6, ZONA LIBRE  
DE COLON  
REPUBLIC DE PANAMA  
TEL: +507-431-1754  
E-mail: [ykimpanama@yahoo.com](mailto:ykimpanama@yahoo.com)

